




PowaLift USB Interface Software

Installation


1 - Plug the USB adapter in and wait for the 'Plug and Play' process to finish.

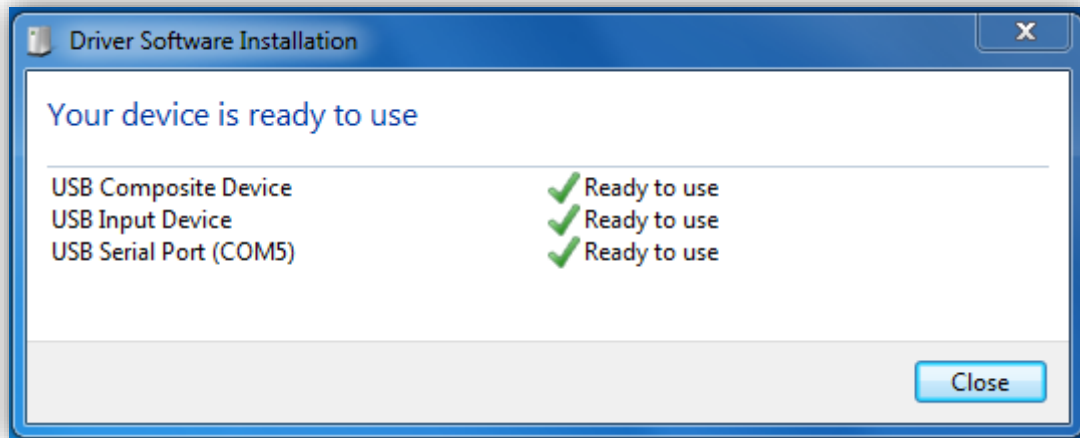

2 – Download/Install directly from the Unicol Website –

<https://www.unicol.com/Support/PowaLift-USB-Interface.aspx>

3 - Run 'Setup.exe' from the browser (you may have to save the file first).

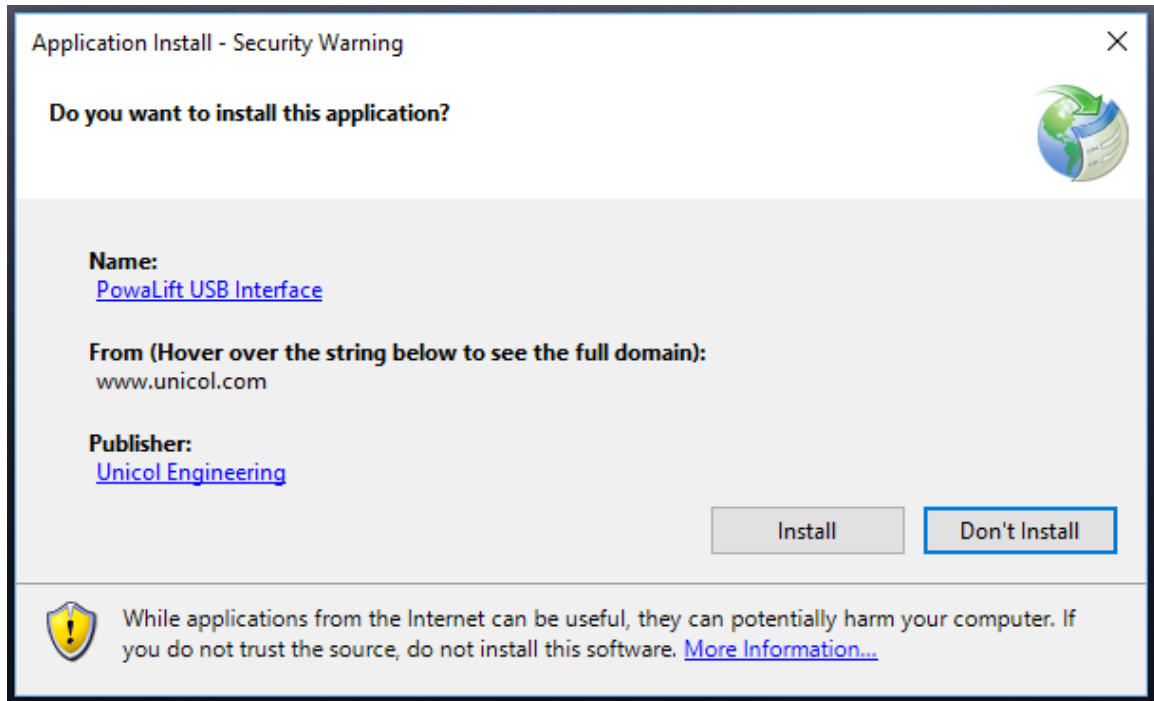

- It will check if your machine already has Microsoft's .NET Framework 3.5 installed


For more information contact Unicol on 01865 767676



PowaLift USB Interface Software


- If it is not it will be download from Microsoft first.

4 – You are now ready to control the PowaLift from your PC – from the ‘Unicol PowaLift’ start menu folder, run ‘PowaLift USB Interface’ – this will connect to the adapter and you can move the PowaLift Up and Down by clicking and holding down the appropriate button.

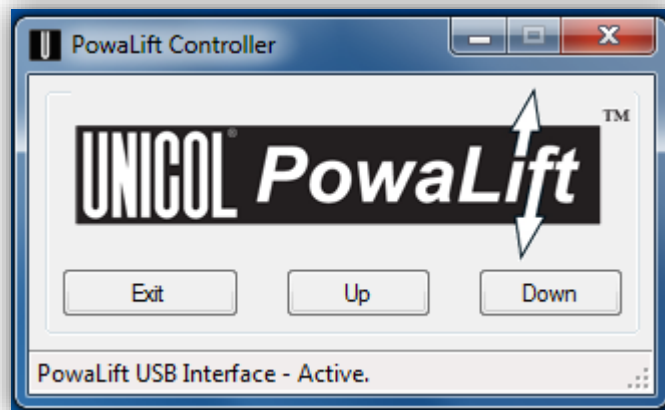

When you have finished you can close the application and remove the USB

If the USB cable is not connected to the PowaLift USB Interface you will be prompted to do so.

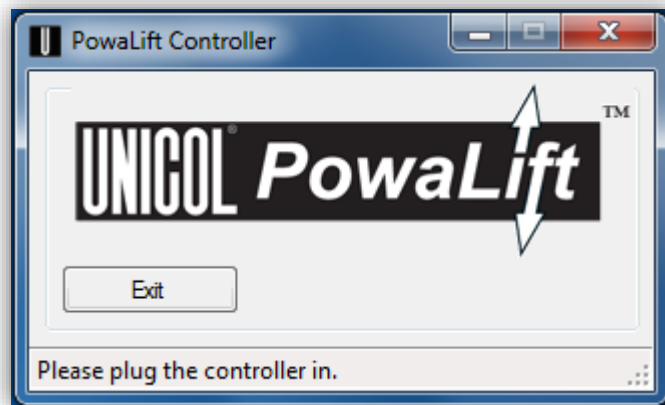

Removal

The Unicol PowaLift USB Interface application can be removed by either re-running the setup from the CD or using the ‘Remove’/‘Uninstall’ option from within the ‘Add and Remove Programs’/‘Uninstall a program’ in the ‘Control Panel’.

For more information contact Unicol on 01865 767676